




**IMPORTANT
Installation Instructions**

**IMPORTANTE
Instrucciones de Instalación**

**IMPORTANT
Instructions d'installation**


© 2021 0B7309807

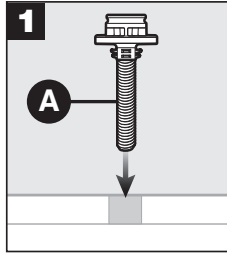

1
Insert (A) into toilet holes.

Inserte (A) en los orificios de montaje del sanitario.

Insérer (A) dans les trous des toilettes.

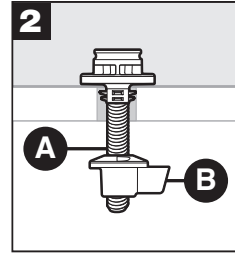

2
Turn (B) onto (A).



Gire (B) en (A).

Visser (B) sur (A).

Tools Needed

Herramientas requeridas


Outils requis

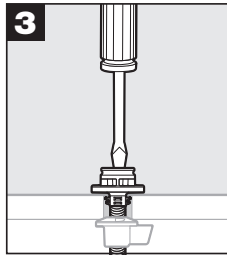

3
Tighten.

Ajuste.

Serrer.

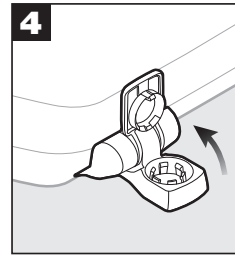

4
Flip up hinge caps.



Levante cubiertas de las bisagras.

Relever les capuchons de charnière.

Hardware Kit Includes

El kit de instalación incluye


Le kit de matériel inclut

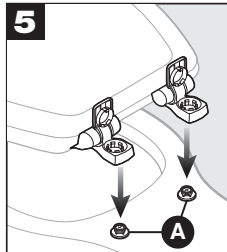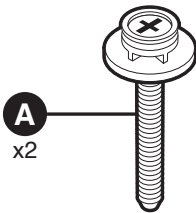

5
Snap hinges onto (A).

Coloque las bisagras sobre (A).

Enclencher les charnières sur (A).

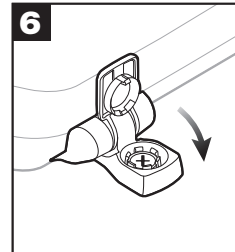

6
Push down hinge caps.

Presione cubiertas de la bisagras.

Presser les capuchons de charnière.

Clean only with a mild soap using a soft, damp cloth and towel dry.

Limpiar solo con detergente suave usando un trapo húmedo, y seque con una toalla.

Nettoyer uniquement avec un savon doux et un chiffon doux et humide, et sécher à l'aide d'une serviette.

MANSFIELD®



888.722.6488

MansfieldPlumbing.com